

How to Make a Custom Ultimate for a Draft Foot

Sketch by Dr. Redden


To make a custom wedge, use a 2" x 8" board and cut or grind a heavy breakover.



NANRIC

877.462.6742

www.nanric.com

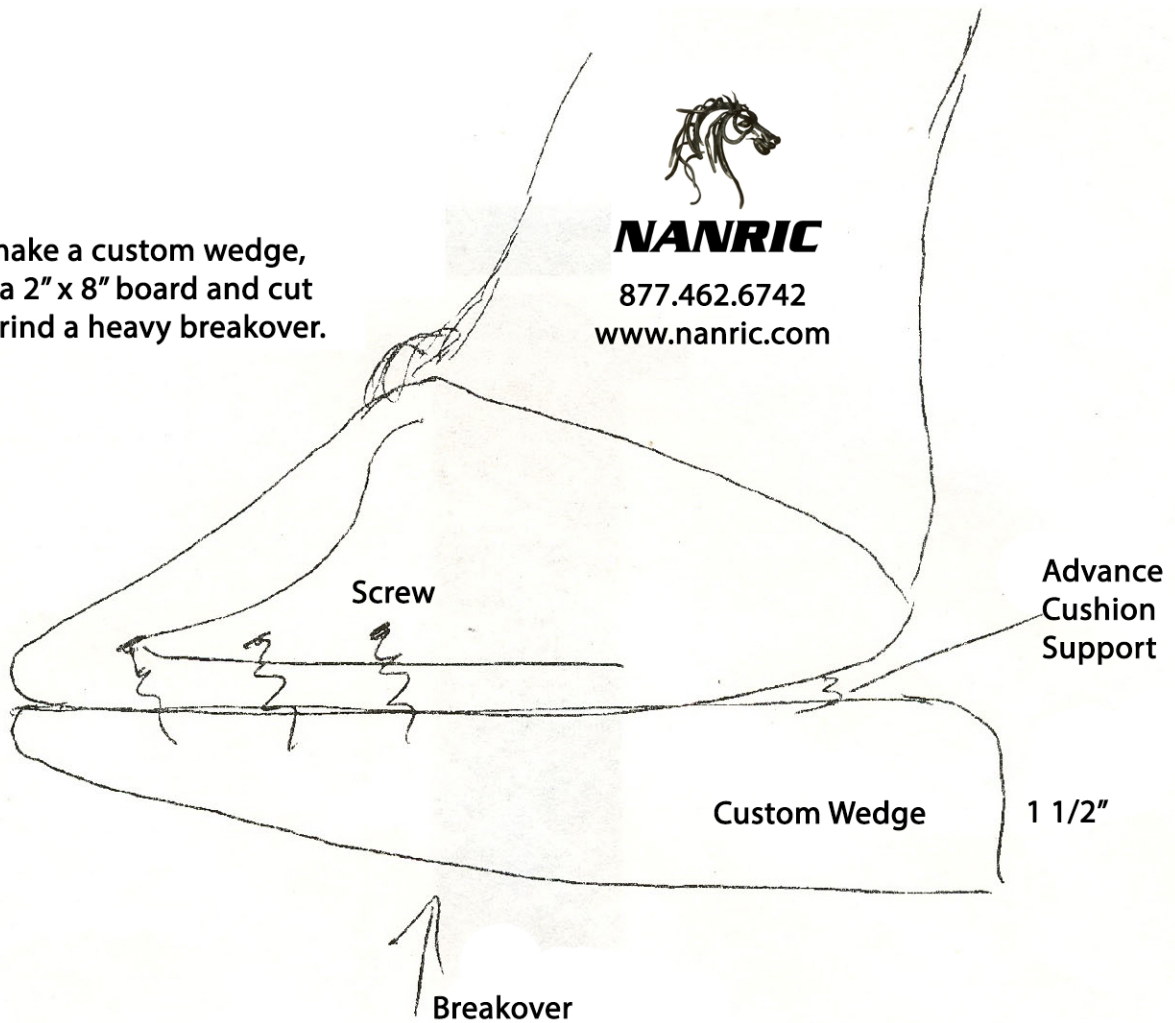

Attach a CS11 cuff to the custom wedge and tape or glue to the foot. If the CS11 cuff is not big enough, use 6 - 8 drywall screws to attach the wedge directly to the foot.

